



Taser AXON Body 2



Axon Body 2 camera

Topics

- Axon Body 2 Overview
- Operating Functions
- Mounting
- Axon Dock 2
- Pairing the Device
- Axon View App



Axon Body 2 camera Features

- Configurable HD Capability
- Dual Channel Audio
- Mute and Markers
- Newly Designed Mounts
- Vibrating (Haptic) Feedback




Axon Body 2 camera Features

- More than 12 hours of battery life
- 30 frames per second
- 143°diagonal field of view camera lens
- 1280 x 720 HD
- 30 second Pre-event buffer
- Wi-Fi to pair your camera to the Axon application



Axon Body 2 camera


Nomenclature

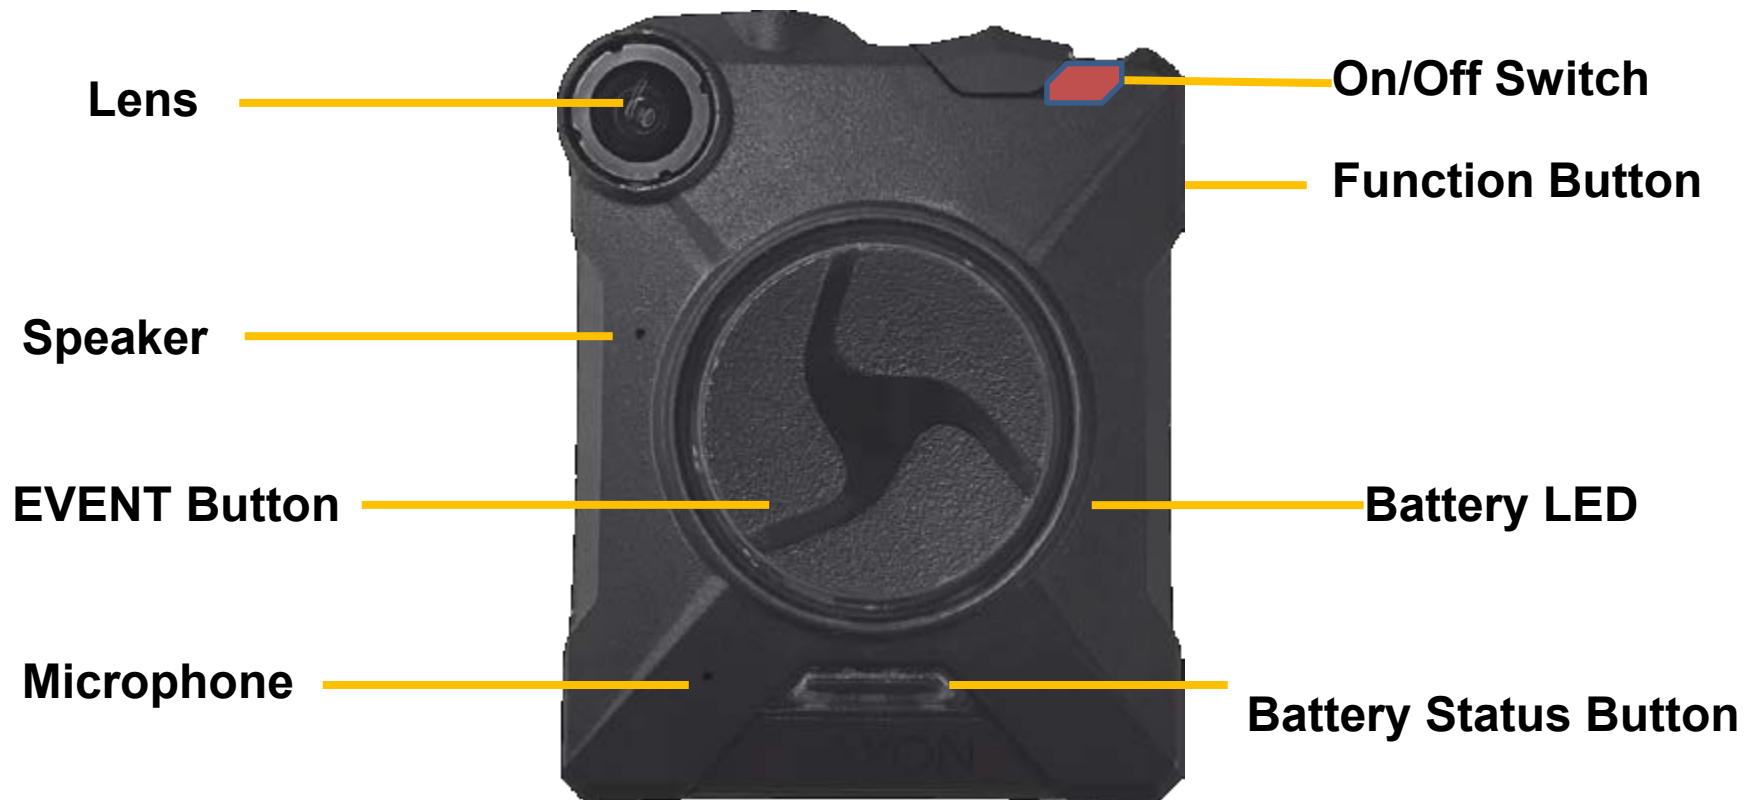

Axon Body 2 camera Nomenclature

Connection Socket

Function LED

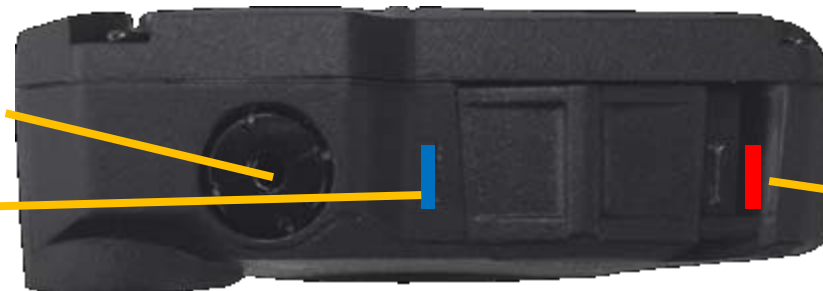

Operation LED



Axon Body 2 camera



Operation LED	Operating Mode
Solid Red	Booting Up
Blinking Green	Buffering
Blinking Red	Recording



Axon Body 2 camera



When on the camera is in **BUFFERING mode**. 30 seconds. Green flashing LED



Axon Body 2 camera



To start recording video,
double tap the **EVENT Button**.
LED blinks red.



Axon Body 2 camera



To stop recording, press and hold the **EVENT Button**.



Axon Body 2 camera

Muting Audio



Press and hold the Function Button 3 seconds to mute audio. Press another 3 seconds to re-enable the audio recording.



Axon Body 2 camera

Battery Life



Battery LED	Battery Life Indicator
Solid Green	41-100%



Axon Body 2 camera

Battery Life



Battery LED	Battery Life Indicator
Solid Green	41-100%
Solid Yellow	20-40%



Axon Body 2 camera

Battery Life



Battery LED	Battery Life Indicator
Solid Green	41-100%
Solid Yellow	20-40%
Solid Red	0-19%
Blinking red & Yellow	Depleted Dead Battery



Axon Body 2 camera

Camera Position P&P 6.131

- Deputies/community services officers shall wear the BWC in a position that provides for the most effective recording angle for the model provided to the wearer while also ensuring the ability to safely activate the camera prior to, or during an incident. Deputies/community service officer shall not intentionally obscure the view of their body worn camera.



Axon Body 2 camera Mounting



Flexible Mount



Outerwear Mount

Axon Body 2 camera Mounting



Small Pocket Mount



Axon Body 2 camera

Docking & Charging the camera



Axon Body 2 camera

Docking & Charging the camera

Operation Manual

When not in use, the BWC devices shall be stored in the designated docking module or in a secure storage location at each patrol station, court, or any detention facility. Deputies will ensure the BWC is properly seated into the docking station to allow for proper downloading and charging.



Axon Body 2 camera

Docking & Charging the camera

Operation Manual

After verifying the required metadata has been added to all recorded events, deputies shall place the BWC into a slot on the Evidence Transfer System at the end of their shift. This will allow for the battery to recharge. The data will automatically be transferred from the BWC through the Evidence Transfer System and/or Sheriff's Data Services dedicated server.



Axon Body 2 camera

Camera LED Information during uploading



Initial connection (momentary)
Solid red (for up to 20 seconds or fewer)



In queue awaiting upload Solid yellow



Uploading data Blinking yellow



Upload Complete Solid green



Axon Body 2 camera

Camera LED problems uploading



Device not assigned, agency mismatch, camera set in the offline mode, or device error **Blinking red**



Firmware update, internal battery charging, extremely low battery, or memory full
Blinking **red** and **yellow**



Transfer error, device re-trying to transfer or camera is left powered on when inserted
Blinking **green** and **yellow**



Network error (no connection) Blinking **red**, **yellow**, and then **green** (cycling all colors)



Axon Body 2 camera

Camera LED problems uploading



Axon Dock has no communication with the camera LED off

Re-seat it into the dock



Axon Body 2 camera

AXON VIEW Smart Device App setup



San Diego County Sheriff's Department
Video Analysis Unit

Axon Body 2 camera

AXON VIEW Smart Device App

Provides the following capabilities:

- Pairs Axon cameras with iOS devices
- Instant replay
- Live video streaming assists with optimal camera placement
- GPS tagging maps video evidence automatically
- Real-time metadata input enables searching and accurate retention



Axon Body 2 camera

AXON VIEW Smart Device App setup


Steps to pair BWC with App

- Turn on WiFi and Bluetooth on phone
- Turn **OFF** AXON Body 2 Camera
- Launch Axon View App from home screen



Axon Body 2 camera

Steps to pair BWC with App

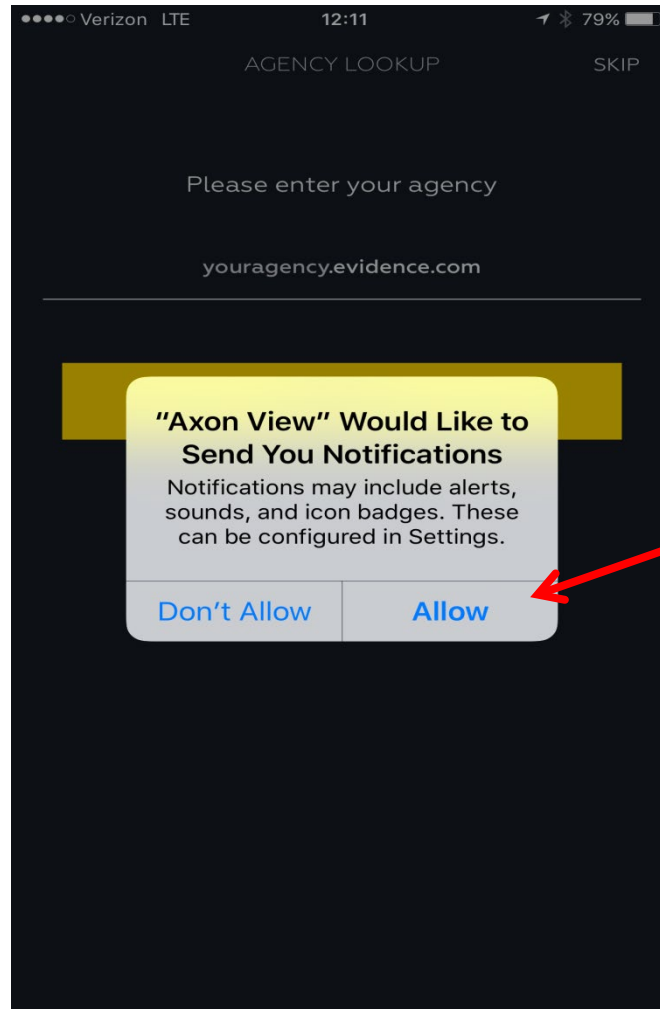


Axon Body 2 camera

Steps to pair BWC with App

SDCSD.evidence.com

Click Continue

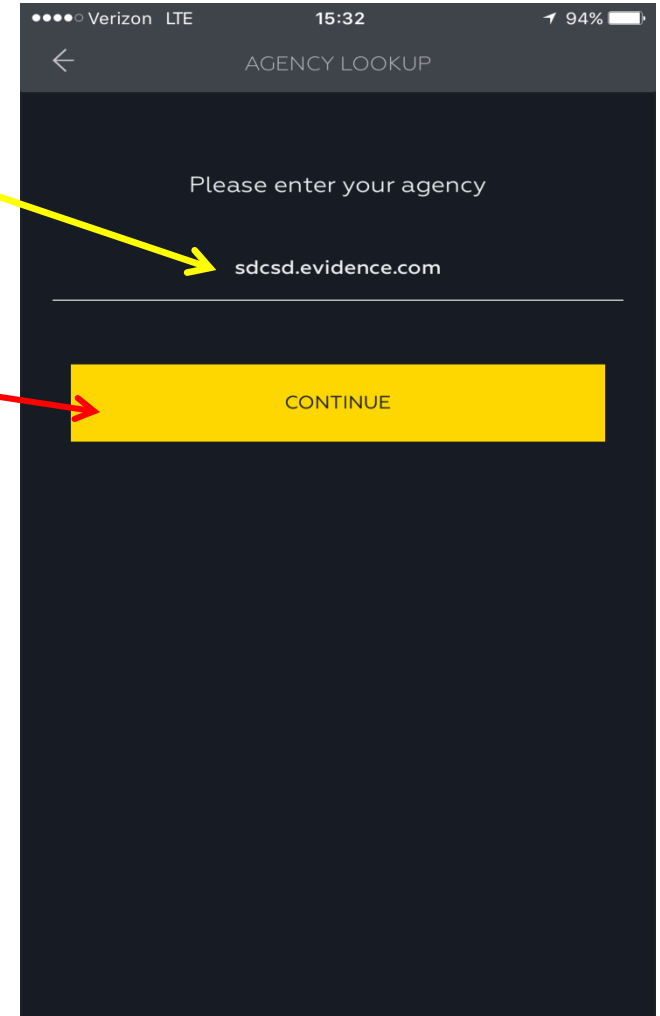


Axon Body 2 camera

Steps to pair BWC with App

Body 2

Stop! Now turn
on camera wait
for boot up

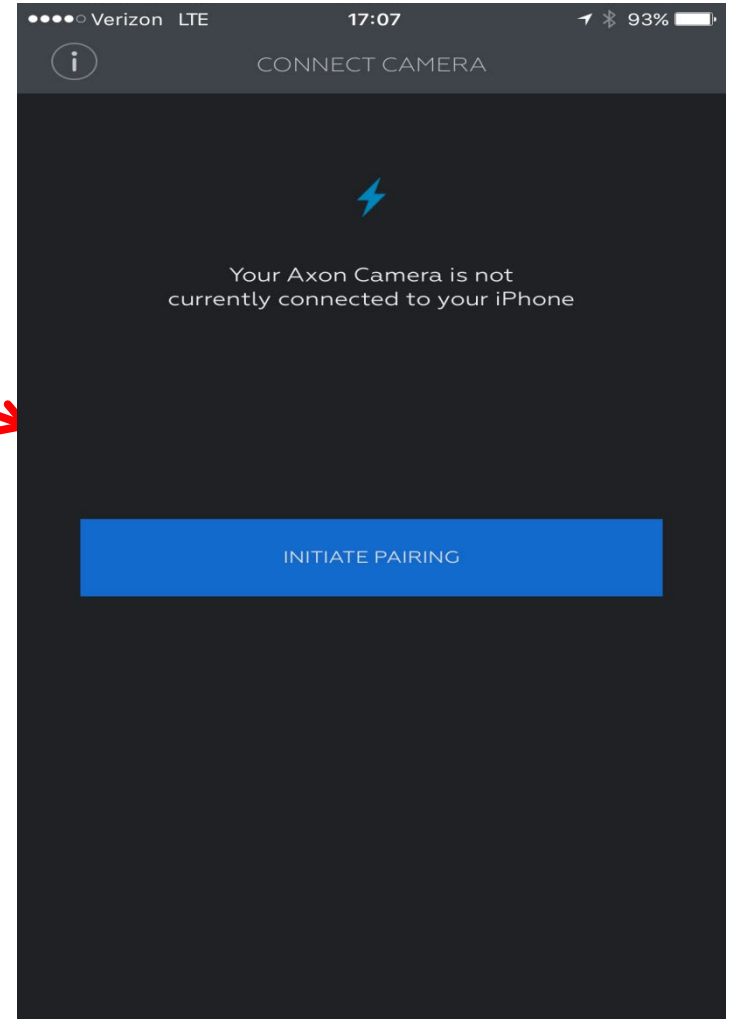


Axon Body 2 camera

Steps to pair BWC with App

- Press both the **Event button** and the **Function button** together for 4-5 seconds
- Press Initiate Pairing




Look at serial #
on bottom

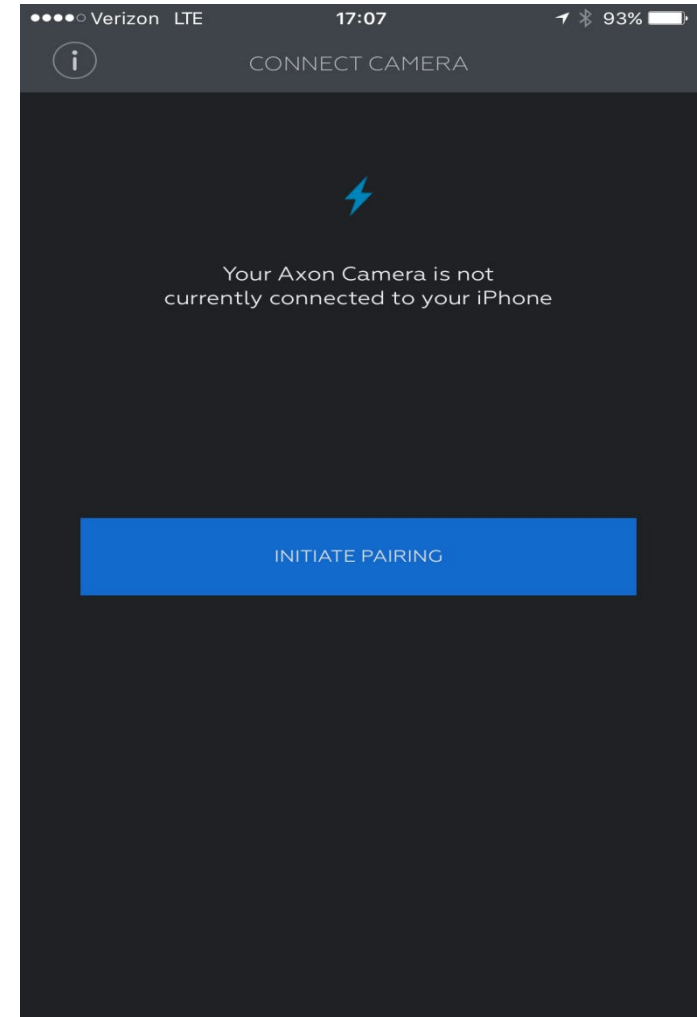

Axon Body 2 camera

Steps to pair BWC with App


- Select your camera serial #.
Double check the bottom of your camera!

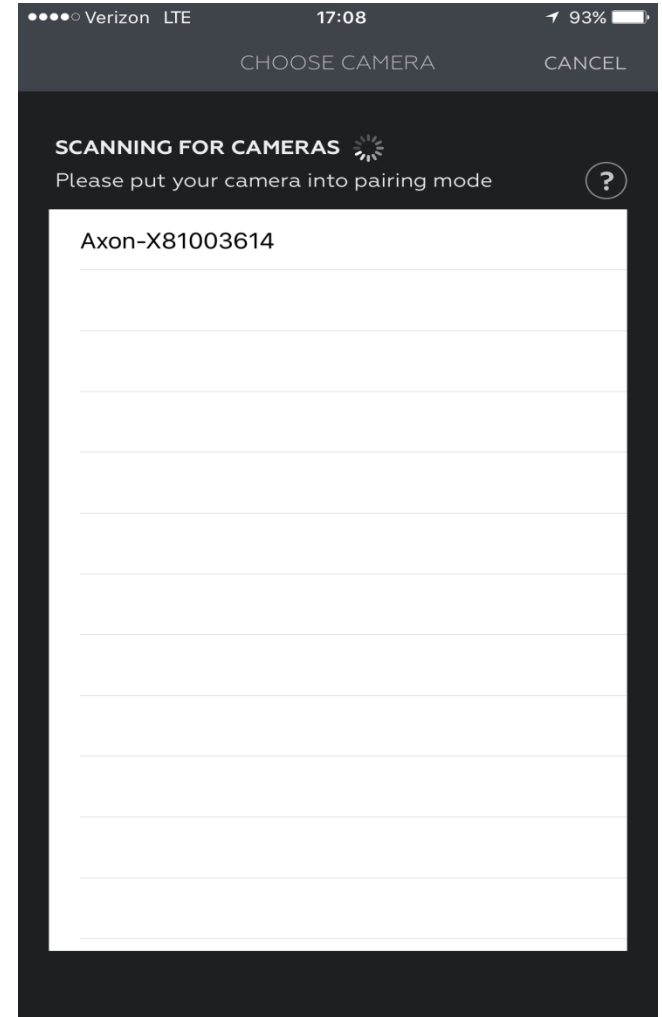

Axon Body 2 camera

Steps to pair BWC with App


- Select Continue

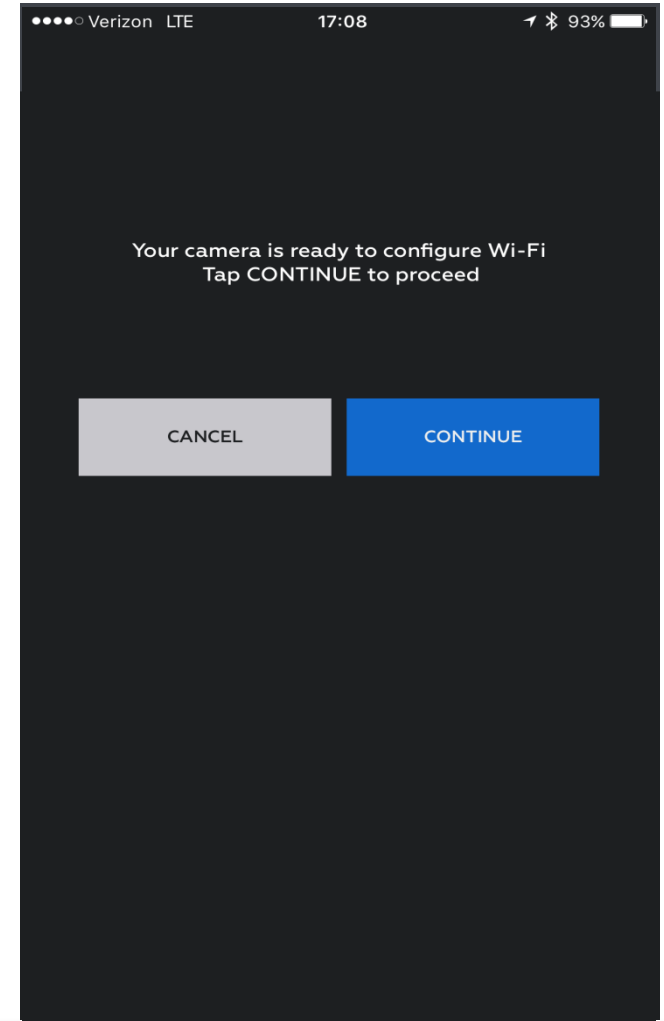

Axon Body 2 camera


Steps to pair BWC with App

1. Select Configure WiFi
2. Press Allow
3. Install
4. Enter Passcode
5. Install
6. Done
7. Open
8. Allow

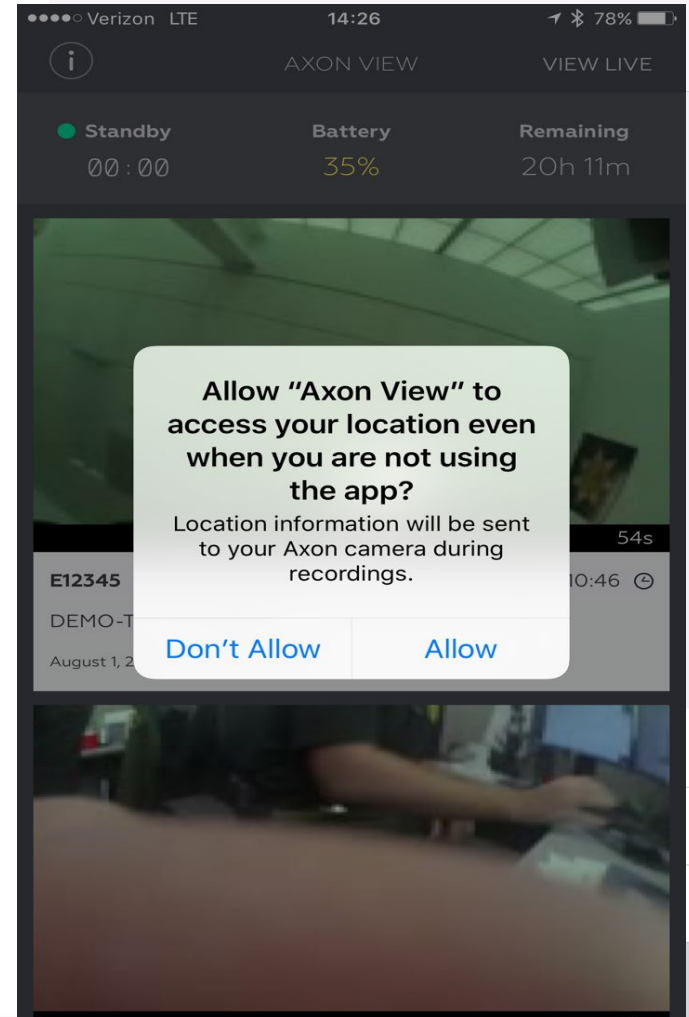


Axon Body 2 camera

Select the (i)

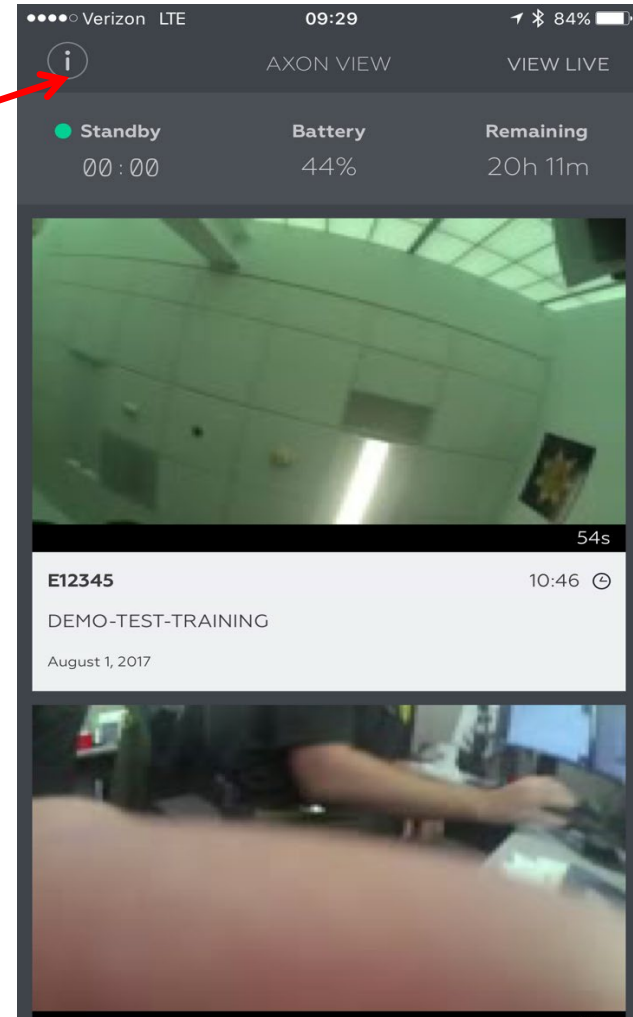

Axon Body 2 camera

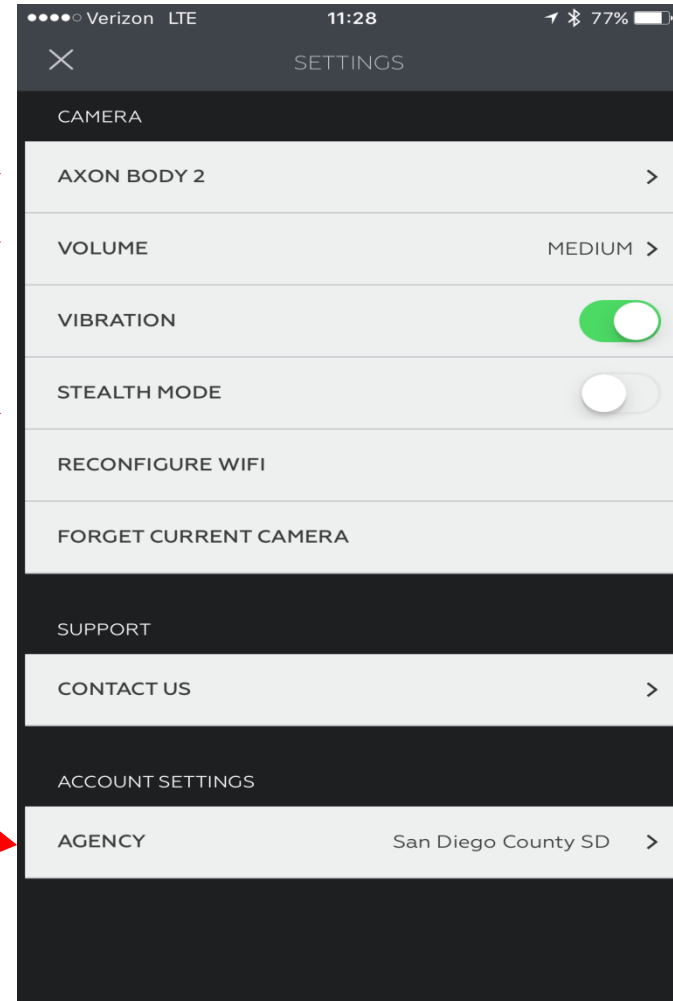

Axon Body 2

Volume tone

Vibration


Stealth Mode

Agency SDSD




Axon Body 2 camera

Click the X

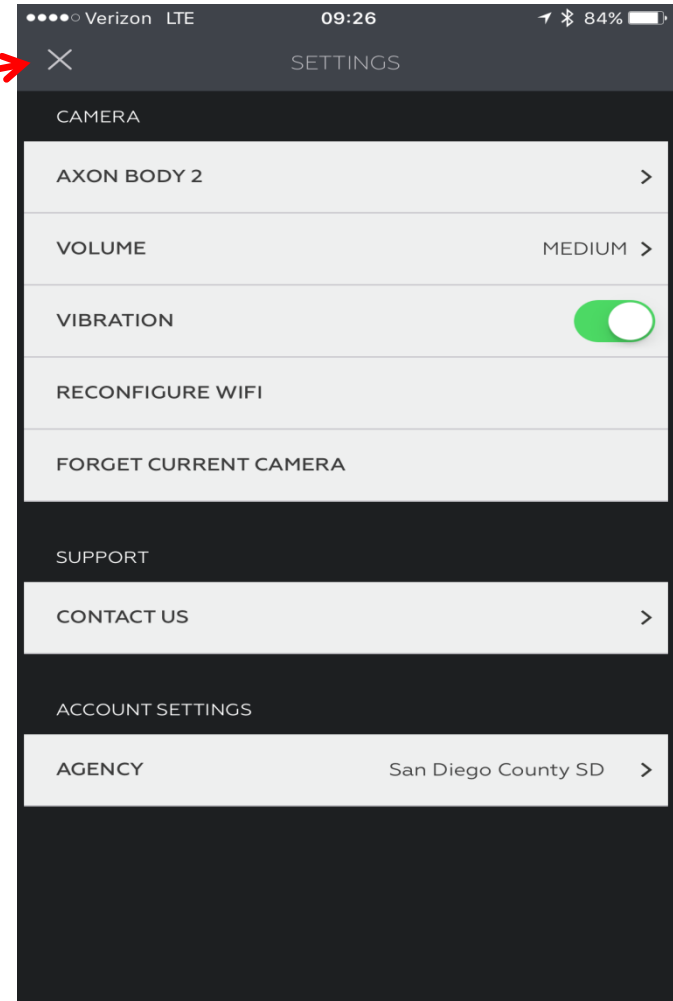

Axon Body 2 camera


Click the live view

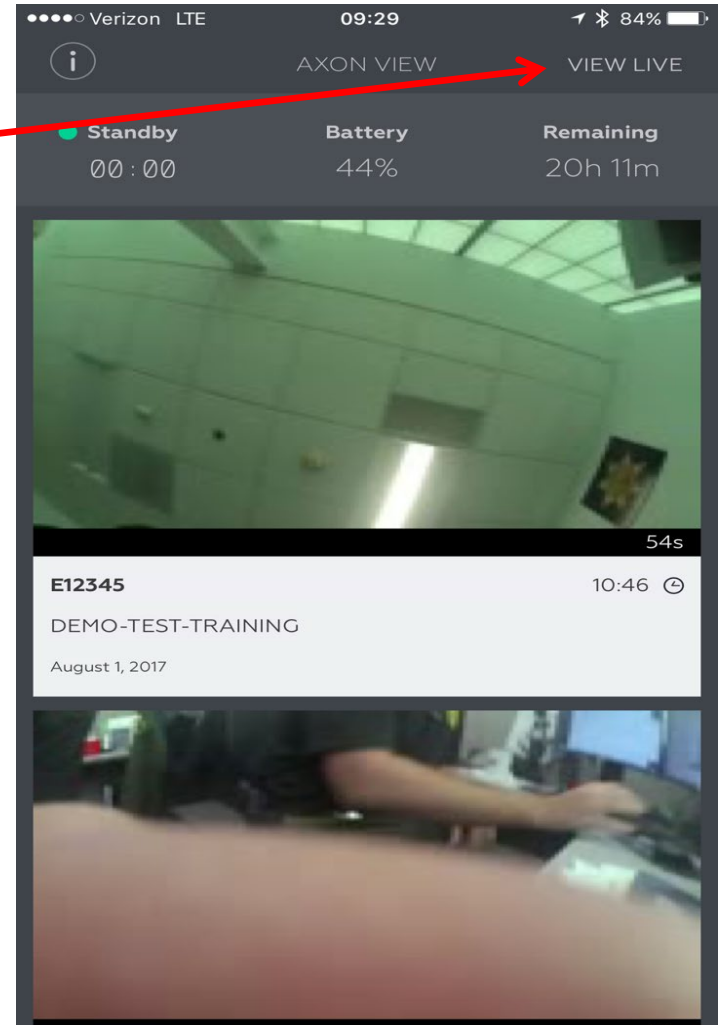

Axon Body 2 camera


Steps to pair BWC with App

Click done when
finished

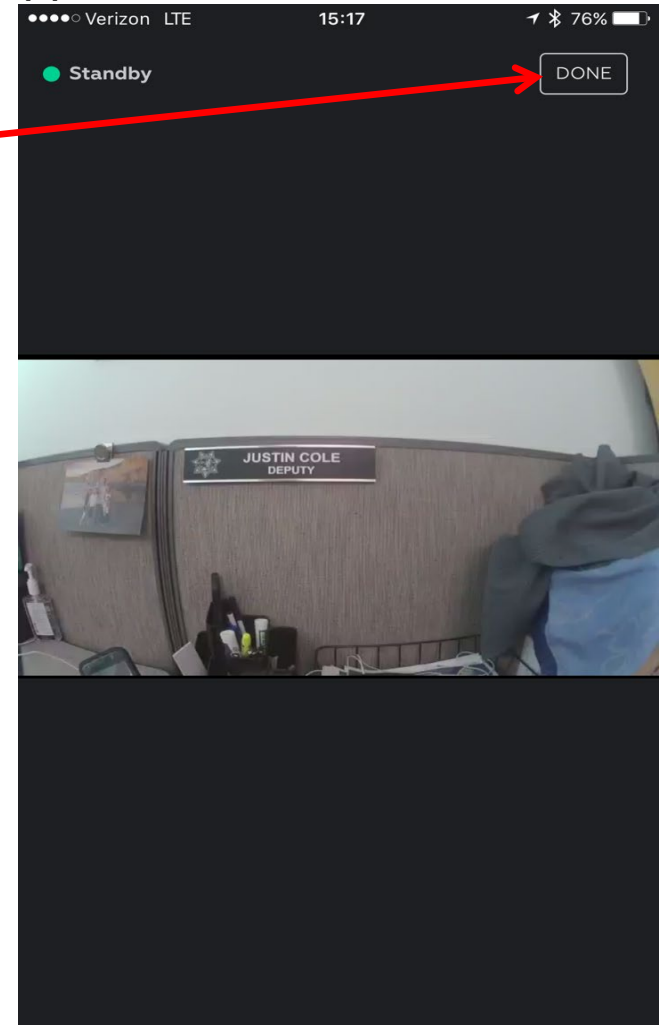

Axon Body 2 camera

Click top video

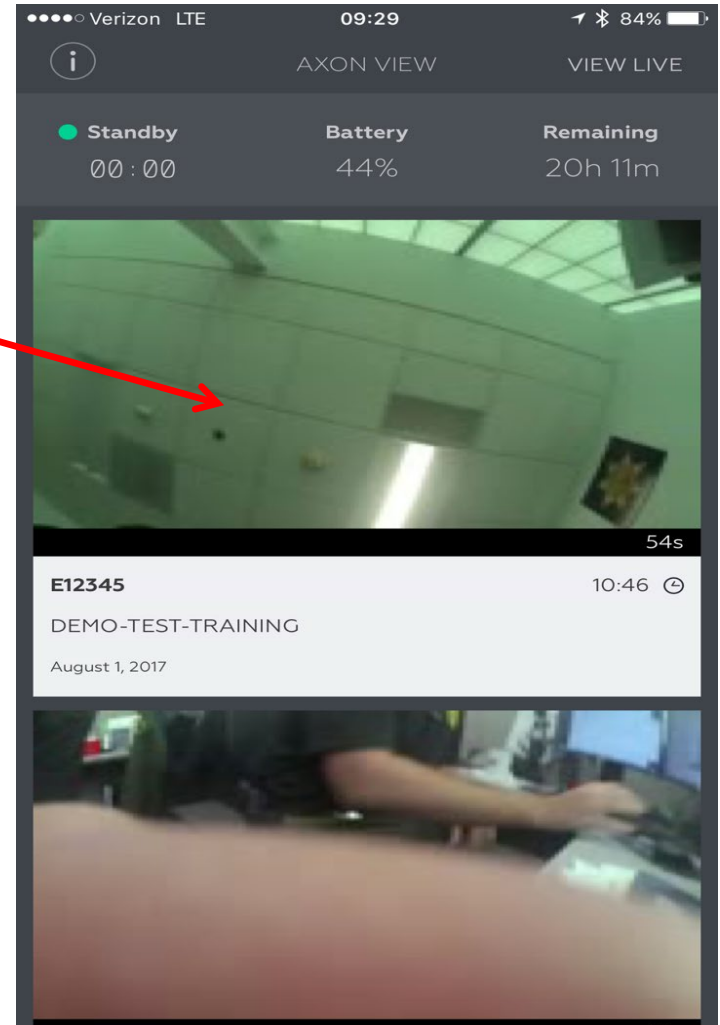

Axon Body 2 camera


Play video

ID CAD Incident number

Title bar LAST NAME

Categories drop menu

Click on ID

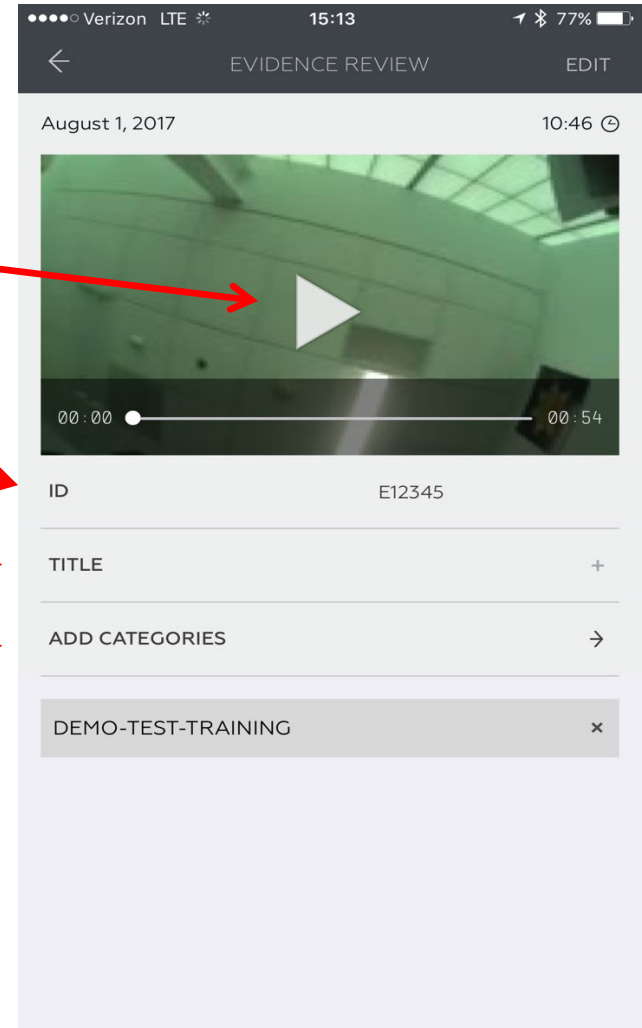

Axon Body 2 camera

CAD Incident number

Title menu Last Name

Categories drop menu

Click SAVE when done

The screenshot shows the Axon Body 2 camera app interface. At the top, there is a status bar with 'Verizon LTE', '15:14', and '76%' battery. Below the status bar, there is a dark header with 'CANCEL' on the left and 'SAVE' on the right. The main content area is light gray and contains the following fields:

- A date field showing 'August 1, 2017' and a time field showing '10:46' with a clock icon.
- An 'ID' field with the value 'E1234567'.
- A 'TITLE' field with a '+' icon on the right.
- An 'ADD CATEGORIES' field with a right arrow icon.
- A category list showing 'DEMO-TEST-TRAINING' with a close icon 'x' on the right.

Four red arrows point from the text labels on the left to the corresponding fields in the app:

- From 'CAD Incident number' to the 'ID' field.
- From 'Title menu Last Name' to the 'TITLE' field.
- From 'Categories drop menu' to the 'ADD CATEGORIES' field.
- From 'Click SAVE when done' to the 'SAVE' button in the header.




What is Commander?

- Commander is a digital evidence management program
- Currently only for management of BWC videos
- Potential in the future to include all forms of digital evidence such as interview video, audio files, photographs, case documents, and BWC video




Launching Commander

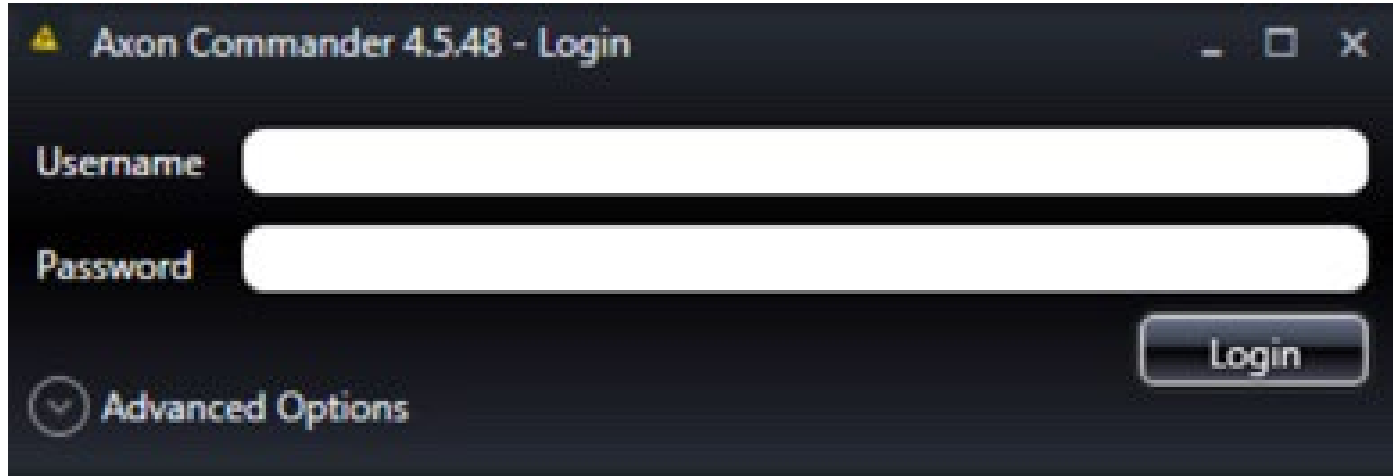A screenshot of the Axon Commander 4.5.48 login window. The window has a dark blue header with the title "Axon Commander 4.5.48 - Login" and standard window control buttons (minimize, maximize, close). Below the header, there are two white text input fields: "Username" and "Password". To the right of the "Password" field is a "Login" button. At the bottom left, there is a "Advanced Options" link with a downward arrow icon.


- Launch Commander from Shortcut Icon on Desktop
- Commander Client Login screen appears
- Type in your Username and Password in text boxes and click **Login**
- This will be your Sheriff's Desktop username and password



Commander Main Page

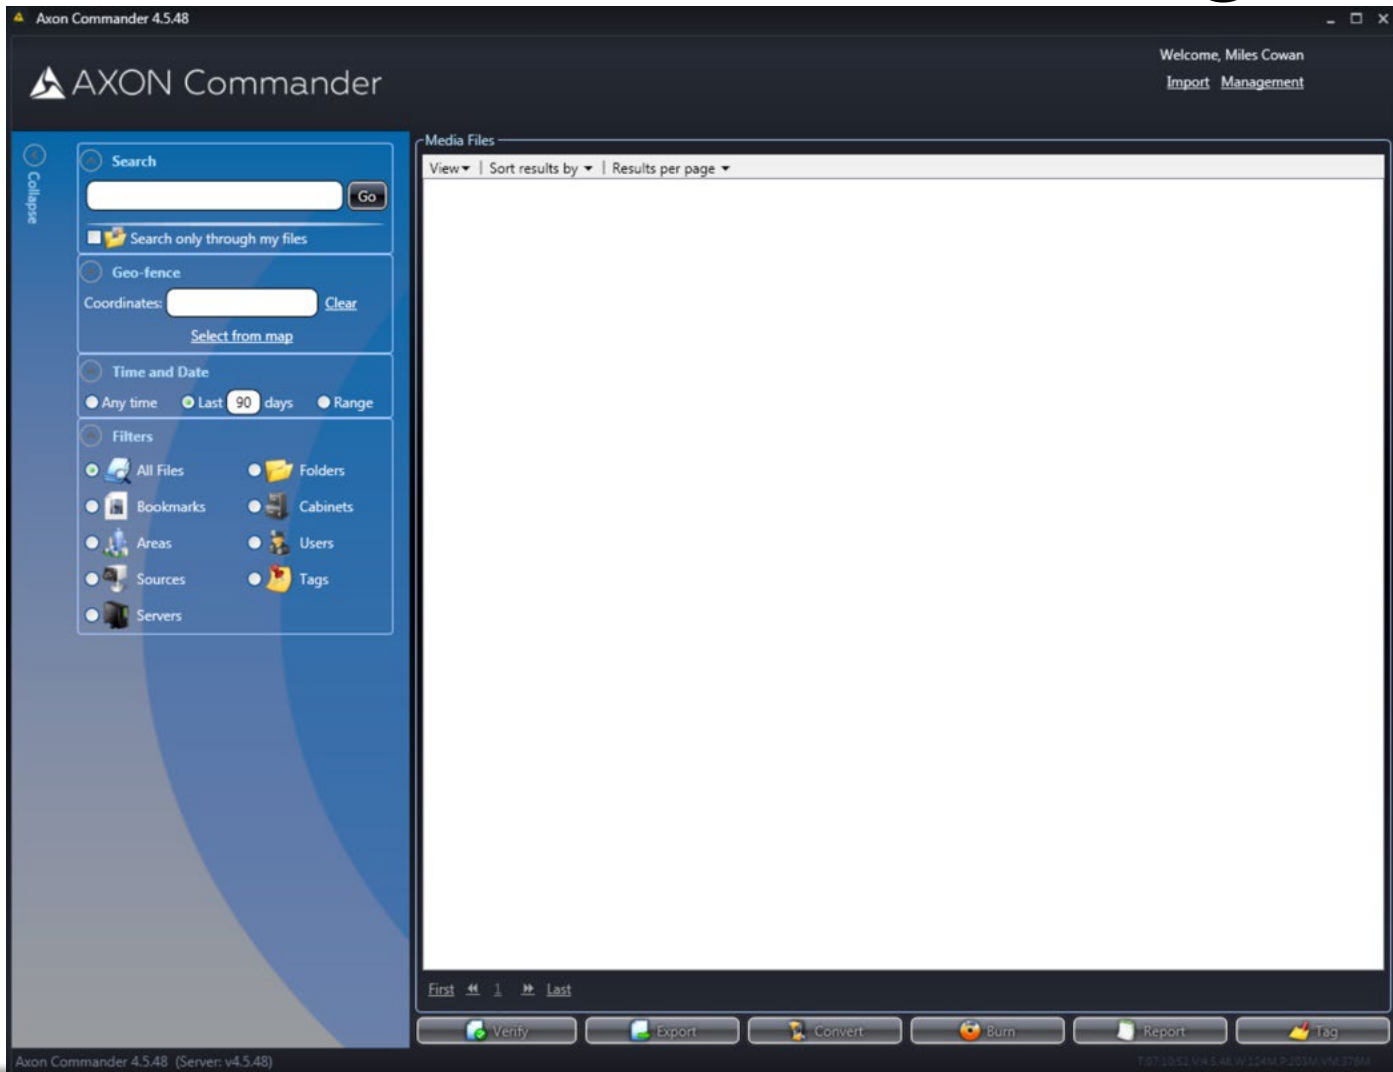

Search Pane

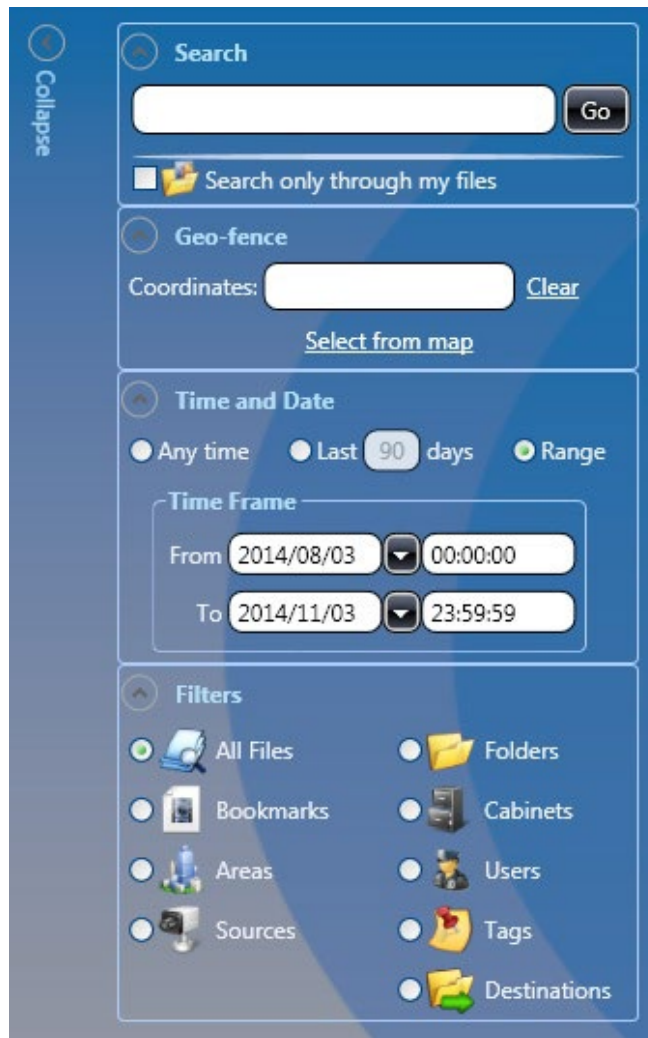

The image shows a 'Search Pane' interface with a blue background. On the left side, there is a vertical 'Collapse' button with a circular arrow icon. The main area is divided into four sections, each with a collapse arrow icon on the left:

- Search:** Contains a text input field and a 'Go' button. Below it is a checkbox labeled 'Search only through my files'.
- Geo-fence:** Contains a 'Coordinates:' label, a text input field, and a 'Clear' link. Below the input field is a link labeled 'Select from map'.
- Time and Date:** Contains three radio buttons: 'Any time', 'Last 90 days', and 'Range'. The 'Range' option is selected. Below the radio buttons is a 'Time Frame' section with 'From' and 'To' labels. The 'From' field shows '2014/08/03' and '00:00:00'. The 'To' field shows '2014/11/03' and '23:59:59'.
- Filters:** Contains a grid of filter options, each with a radio button and an icon:
 - All Files (document icon)
 - Bookmarks (bookmarks icon)
 - Areas (area icon)
 - Sources (source icon)
 - Folders (folder icon)
 - Cabinets (cabinet icon)
 - Users (user icon)
 - Tags (tag icon)
 - Destinations (destination icon)



Search

☐ Search only through my files

Geo-fence

Coordinates: [Clear](#)
[Select from map](#)

Time and Date

☒ Any time ☐ Last days ☐ Range

Filters

- ☒ All Files
 ☐ Folders
 ☐ Bookmarks
 ☐ Cabinets
 ☐ Areas
 ☐ Users
 ☐ Sources
 ☐ Tags
 ☐ Servers

Media Files

View ▾ | Sort results by ▾ | Results per page ▾

August, 2015 [3 item(s)]




2015-08-21
12:31:50
28m9s
MP4

FLEX.X78058038.0012.150821.12...



2015-08-21
12:31:46
30m2s
MP4

BODY.X78032315.0015.150821.1...

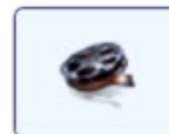

2015-08-21
12:31:42
30m2s
MP4


BODY.X78046669.0013.150821.1...

June, 2014 [3 item(s)]




2014-06-29
00:18:40
JPG

Scene 1234

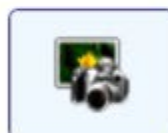

2014-06-29
00:18:36
JPG

Scene 1234

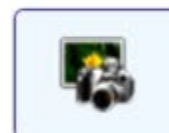

2014-06-29
00:18:18
JPG

Scene 1234

July, 2007 [5 item(s)]



2007-07-11
07:13:02
JPG

Shooting



2007-07-11
07:13:02
JPG

Shooting



2007-07-11
07:13:02
JPG

Shooting



2007-07-11
07:13:02
JPG

Shooting



2007-07-11
07:13:02
JPG

Shooting

Tagging

- Any file in Commander can be tagged which allows users to classify data for easy Search
- For Patrol you will enter “Case ID”, Category **NetRMS case #** (like Axon View Application metadata)
- Two types of Tags: Drop down and Value
- Tag drop down is a list of tag classifications which are preloaded and appear in a drop down selection list
- Value tags apply free-form text
- You can apply tags to multiple files at once
- You can remove and change tags as needed (will be in audit report)



Tagging

The screenshot displays the Axon Commander 4.6.1.4 software interface. On the left is a sidebar with search and filter options. The main area shows a list of video assets, each with a thumbnail, title, username, start time, duration, area, extension, and server. A 'Tags' dialog box is open in the center, showing a table with columns for 'Tag' and 'Value'. The table contains two entries: 'Case ID' with value 'E3268745' and 'Category' with value 'CONTACT ONLY - NO ACTION'. The dialog has 'Add', 'Remove', 'OK', 'Close', and 'Apply' buttons. At the bottom of the interface, there are buttons for 'Verify', 'Export', 'Convert', 'Burn', 'Report', and 'Tag'. The status bar at the bottom right indicates 'Showing 1 - 31 of 31 items'.

Search and Filter Options:

- Search: [Search bar]
- Search only through my files
- Require exact word matches
- Geo-fence
- Time and Date: Any time, Last 90 days, Range
- Filters: All Files, Folders, Bookmarks, Cabinets, Areas, Users, Sources, Tags, Servers

Assets List:

Thumbnail	Title	Username	Start Time	Duration	Area	Extension	Server
[Image]	Warrants		2016-04-06 14:53:30	05:21	taser body cam 2	MP4	SDSO PROD
[Image]	X78031872-clip0442.mp4		2016-04-06 13:38:4		taser axon lxcie	MP4	SDSO PROD
[Image]	WMA yelling In Bathroom		2016-04-06 10:26:0		taser body cam 2	MP4	SDSO PROD
[Image]	X78031872-clip0439.mp4		2016-04-06 09:33:3		taser axon lxcie	MP4	SDSO PROD
[Image]	Tro		2016-04-06 07:50:4		taser body cam 2	MP4	SDSO PROD
[Image]	X81003234-1086849026		2016-04-06 01:22:4		taser body cam 2	MP4	SDSO PROD
[Image]	X81002843-1086849025		2016-04-05 22:37:51	07:41	taser body cam 2	MP4	SDSO PROD

Tags Dialog Box:

Tag	Value
Case ID	E3268745
Category	CONTACT ONLY - NO ACTION

Bottom Bar: March, 2016 [1] | First | 1 | Last | Showing 1 - 31 of 31 items | [Verify] [Export] [Convert] [Burn] [Report] [Tag]



Tagging

The screenshot displays the AXON Commander web interface. On the left is a navigation sidebar with sections for Search, Time and Date, and Filters. The main area shows a list of video assets with details like Title, Username, Start Time, Duration, Area, and Source. A modal window titled 'Tags' is open, showing a table with 'Case ID' (E3268745) and 'Category' (CONTACT ONLY - NO ACTION). Below this, there's a 'Value' field with the text 'Please select a tag.' and buttons for 'Add', 'Remove', 'OK', 'Close', and 'Apply'. The bottom of the interface includes a date filter for 'March, 2016', pagination controls, and a status bar indicating 'Showing 1 - 31 of 31 items'.

AXON Commander

Welcome, Alexander Roti
[Import](#) [Management](#)

Assets

View ▾ | Sort results by ▾ | Results per page ▾

Thumbnail	Title	Username	Extension	Server	Start Time	Duration	Area	Source
	Warrants		MP4	SDSO PROD	2016-04-06 14:53:30	05:21	taser body cam 2	X81002942
	X78023035-clip0190.mp4		MP4	SDSO PROD	2016-04-06 14:53:40	02:02	taser axon lxcie	X78023035
	X78031872-clip0442.mp4		MP4	SDSO PROD	2016-04-06 10:36:04	01:48	taser axon lxcie	X78031872
	WMA yelling In Bathroom		MP4	SDSO PROD	2016-04-06 09:53:25	06:00	taser body cam 2	X81001637-1086849027
	X78031872-clip0440.mp4		MP4	SDSO PROD	2016-04-06 08:14:13	01:34	taser body cam 2	X81001584
	Tro		MP4	SDSO PROD	2016-04-06 02:01:54	10:23	taser body cam 2	X81001936
	X81003234-1086849026		MP4	SDSO PROD	2016-04-06 00:04:41	02:38	taser body cam 2	X81002992-1086849026
	X81002843-1086849025		MP4	SDSO PROD	2016-04-05 22:37:51	07:41	taser body cam 2	X81002843

Tags

Tag	Value
Case ID	E3268745
Category	CONTACT ONLY - NO ACTION

Add tag

Tag:

Value: Please select a tag.

OK Cancel

Add Remove

OK Close Apply

March, 2016 [1]

First 1 Last

Showing 1 - 31 of 31 items

Verify Export Convert Burn Report Tag

Search results: 31 asset(s) found.

T:08:12:48 V:4.6.1.4 W:3200x2770M VM:577M Tm:165K



How to Send to the DA's Office

- Select/highlight the videos you wish to send
- Select Add Tag (Tag box will appear)
- Tag: "Share"
- Value section "DA" Once this tag is applied copies of the videos will be sent to a "bucket" which the DA has access to



How to Send to the DA's Office

AXON Commander

Welcome, Juliet Dias
[Import](#) [Management](#)

Search

☐ Search only through my files
☐ Require exact word matches

Geo-fence

Time and Date
☒ Any time ☐ Last 90 days ☐ Range

Filters

- All Files
- Bookmarks
- Areas
- Sources
- Servers
- Folders
- Cabinets
- Users
- Tags

Assets

View | Sort results by | Results per page

April, 2016 [24]

2016-04-07 11:45:00 6m MP4
X78005169-clip0350.mp4

2016-04-07 11:34:20 9m30s MP4
X78005169-clip0350.mp4

2016-04-07 10:31:30 10m34s MP4

2016-04-07 10:31:18 10m10s MP4

2016-04-07 07:14:44 7m10s MP4

2016-04-07 01:21:14 5m41s MP4
happy

2016-04-07 01:19:46 1m48s MP4
ATC

2016-04-06 15:02:21 3m17s MP4

2016-04-06 14:53:30 5m21s MP4
Warrants

2016-04-06 14:33:40 2m2s MP4
X78023035-clip0190.mp4

2016-04-06 08:14:13 1m34s MP4

2016-04-06 07:50:44 2m19s MP4
Tro

2016-04-06 02:01:54 10m23s MP4
415c Deli every Bill Dispute

2016-04-06 13:38:44 46s MP4
Susp

2016-04-06 22:01:28 3m6s MP4
647

2016-04-06 01:22:47 6m8s MP4
X78031872-clip0442.mp4

2016-04-06 01:22:47 6m8s MP4
X78031872-clip0442.mp4

2016-04-06 01:22:47 6m8s MP4
X81003234-1086849026

2016-04-06 01:22:47 6m8s MP4
X81002992-1086849026

Tags

Tag	Value
Case ID	E3272241
Category	CONTACT ONLY - NO ACTION

Add tag

Tag: Share

Value: DA

OK Cancel

Add Remove

OK Close Apply

Showing 1 - 24 of 24 items

Verify Export Convert Burn Report Tag

Search results: 24 asset(s) found.

T:13:56:24 V:4.0.1.4 W:140M P:239M VM:407M TM:125K



Burning a File

- Files in Commander can be burned to a Data or Authored DVD
 1. Highlight the file in Results Pane
 2. Right-click on file and select **File Operations > Burn to DVD** or click **Burn** at the bottom of the results pane or in Commander Client Player
 3. Select the desired drive
 4. Make sure a disk is inserted and select your speed
 5. Select Authored or Data (Authored can be played back in standard DVD Player. Data contains original files)
 6. Click **Burn to DVD**





For recommendations, comments and feedback send an email to

VAU@sdsheriff.org

For any inquires that require a response please contact a member of the VAU directly



TASER



AXON



San Diego County Sheriff's Department
Video Analysis Unit